



Notes:


1. Assemble the ground cage as illustrated on sheet 2.
2. Prepare a hole 400mm x 400mm x 300mm deep and fill with ST4 concrete.
3. Insert the ground cage into the concrete.
4. Ensure the plate is flush and level with the surface of the concrete.
5. Allow the concrete to set.
6. Remove the nuts and washers from the top of the ground cage studs.
7. Align the Flexaboll bollard to face oncoming traffic and place over the ground cage studs.
8. Refit nuts and washers to secure the bollard in place.

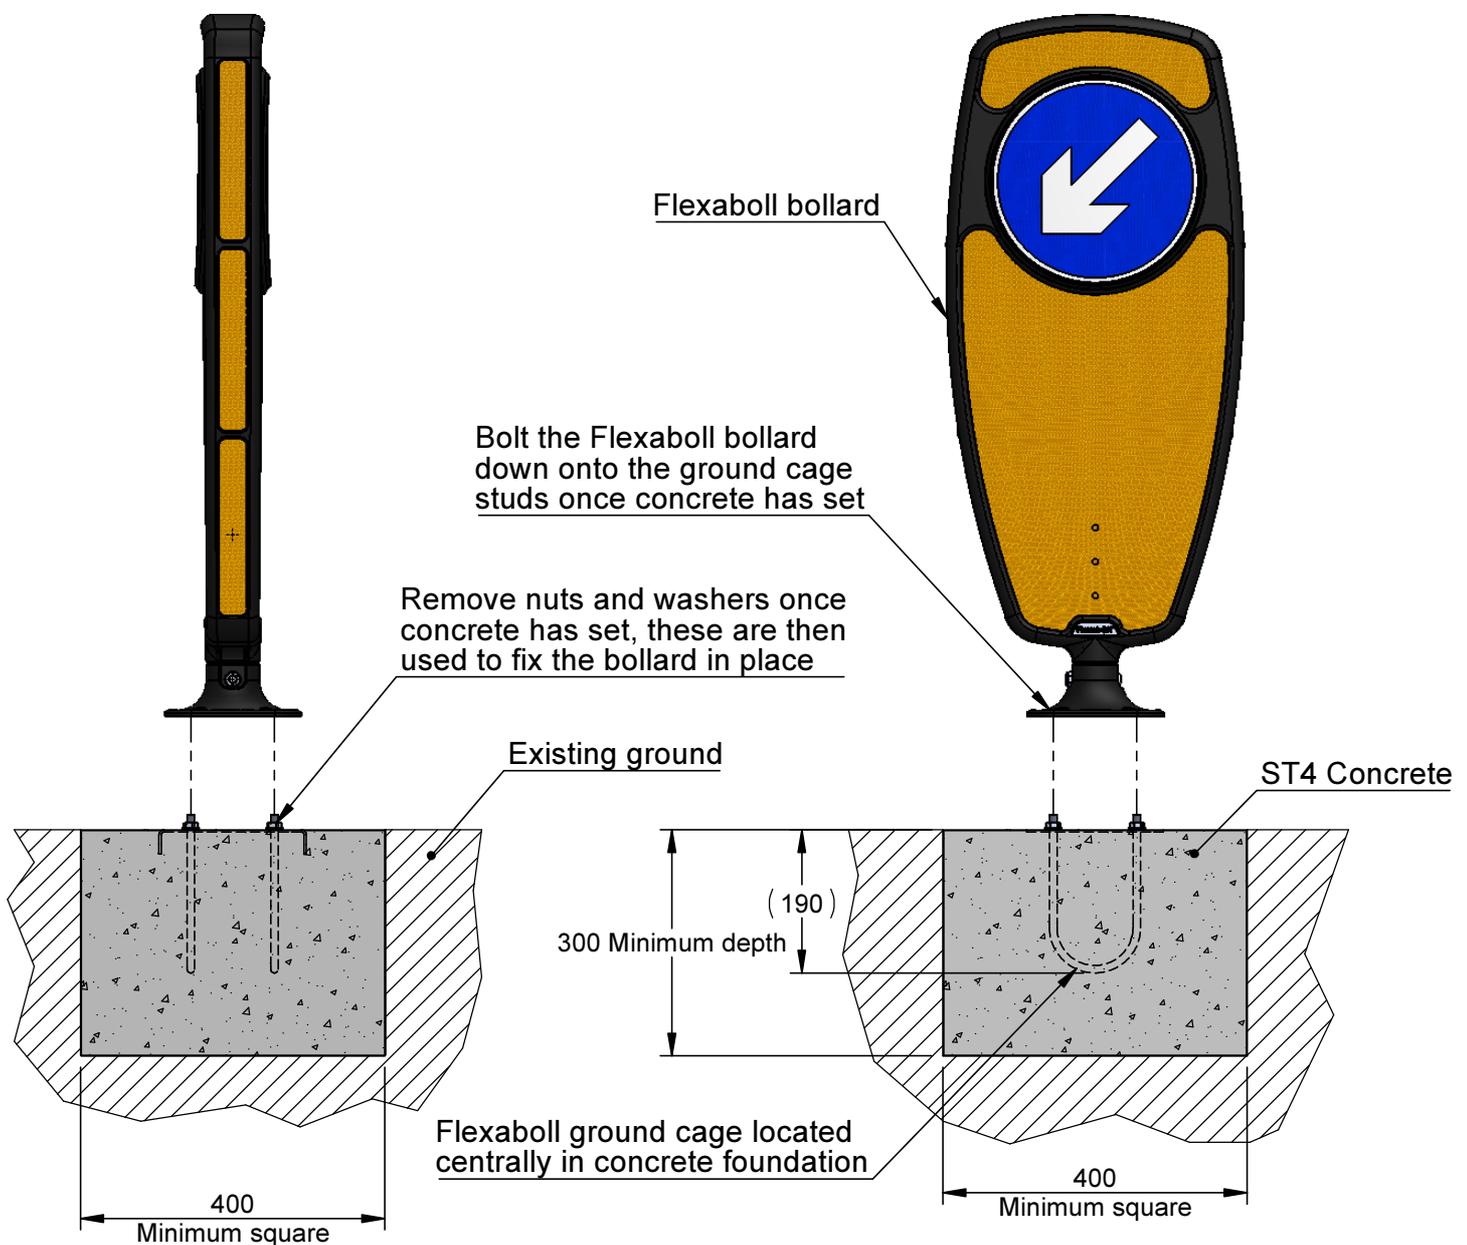


① Unfasten nuts and washers from each end of each U-bolt

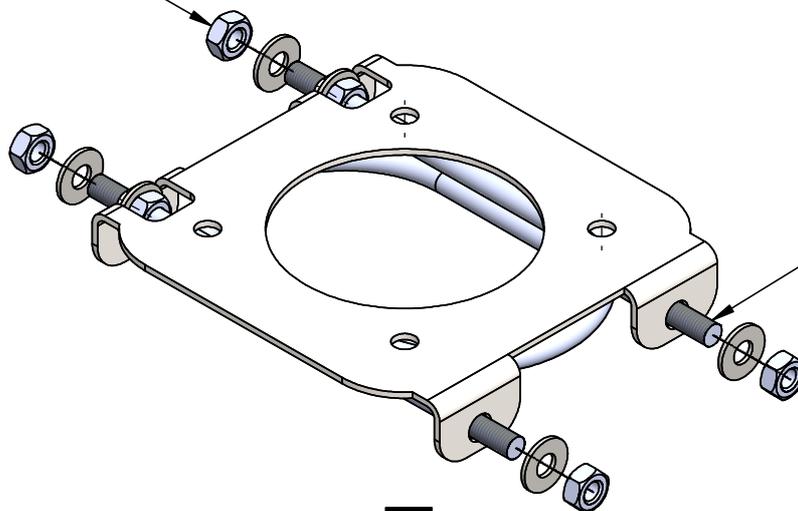

② Remove U-bolts from top plate side holes

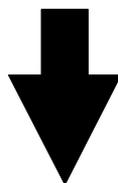

⑤ Reattach nuts and washers to secure U-bolts in place

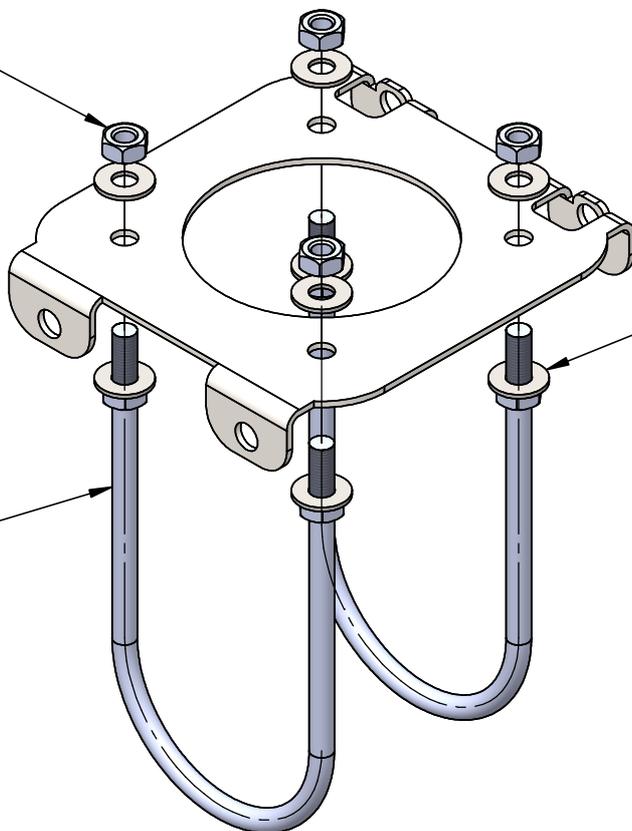

③ Ensure nuts and washers are wound to the bottom of the U-bolt threads

④ Insert U-bolts through vertical holes in the top plate